## WA503 SINGLE RACK, FRONT-MOUNT ANTENNA CONVERSION KIT

## **Bracket Installation**

 Remove the screws from each side of the receiver. See Figure 1.





FIGURE 1

 Secure the brackets (not supplied with the WA503 kit) to the sides of the receiver with the screws removed in Step 1. See Figure 2.




NOTE: There are four holes in each

bracket. Use the rear holes if the receiver is to be recessed; use the front holes to mount it flush to the rack.

## WA503 Adapter & Cable Installation

 Insert the WA503 adapters through the holes in each bracket, and secure them from each side, using the attaching hardware. See Figure 3.



2. Connect the supplied antenna cables to the receiver antenna inputs and WA503 adapters. See Figure 4.




FIGURE 4

3. Screw the antennas into the bulkhead adaptors protruding through the front panel. See Figure 5.

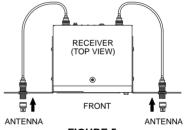


FIGURE 5

4. Insert the receiver into the equipment rack and secure the brackets to the rack with the supplied screws. See Figure 6.




FIGURE 6

**NOTE:** For more information, call Shure Customer Service at 1–847–600–2000.